

# Emergency Stop Safety Relay SR3C AC/DC24V



it works

## User Information

English translation

### Correct Use

The SR3C is a universal emergency stop safety switching device with three safe relay outputs that can quickly and safely stop the moving parts of a machine or system in case of danger.

Applications for the SR3C include single or dual-channel emergency stop circuits and guard monitoring on machines and systems.

### Features

- 3 safe, redundant relay outputs
- 1 auxiliary contact (signaling contact)
- Connection of:
  - Emergency stop buttons
  - Safety switches
  - Non-contact safety switches
  - OSSD-Outputs
- Single and dual-channel operation possible
- Feedback loop for monitoring downstream contactors or expansion modules
- Cyclical monitoring of the output contacts
- Indication of the switching state via LED



SR3C, Order no. 472173  
Germanischer Lloyd  
certificate 32915-06HH



(not for plug-in terminals)

- 2 start behaviors possible:
  - Monitored manual start
  - Automatic start
- Short circuit and earth fault monitoring
- Up to PL e, SILCL 3, category 4
- Version with higher DC breaking capacity possible

### Function

The emergency stop safety switching device SR3C is designed for safe isolation of safety circuits according to EN 60204-1 and can be used up to safety category 4, PL e according to EN ISO 13849-1.

The internal logical system closes the safety contacts when the start button is pressed.

If the safety switch is opened, the positively driven safety contacts are opened and safely switch the machine off. It is ensured that a single fault does not lead to a loss of the safety function and that every fault is detected by cyclical self-monitoring no later than when the system is switched off and switched on again.

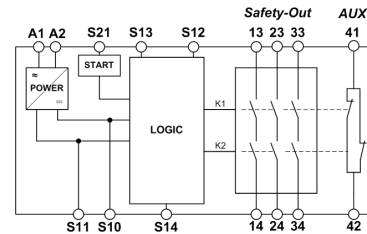


Fig. 1 Block diagram SR3C

### Installation

As per EN 60204-1, the device is intended for installation in control cabinets with a minimum degree of protection of IP54. It is mounted on a 35-mm DIN rail according to DIN EN 60715 TH35.

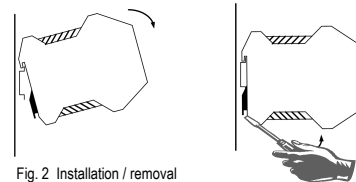


Fig. 2 Installation / removal


### Safety Precautions



 - Installation and commissioning of the device must be performed **only by authorized personnel**.
- Observe the country-specific regulations when installing the device.
- The electrical connection of the device is only allowed to be made with the device isolated.
- The wiring of the device must comply with the instructions in this user information, otherwise there is a risk that the safety function will be lost.
- It is not allowed to open the device, tamper with the device or bypass the safety devices.
- All relevant safety regulations and standards are to be observed.
- The overall concept of the control system in which the device is incorporated must be validated by the user.
- Failure to observe the safety regulations can result in death, serious injury and serious damage.

### Electrical Connection

- When the 24V version is used, a control transformer according to EN 61558-2-6 or a power supply unit with electrical isolation from the mains must be connected.
- External fusing of the safety contacts (6A slow-blow or 8A quick-action or 10 A gG) must be provided.
- A maximum length of the control lines of 1000 meters with a line cross section of 0.75 mm<sup>2</sup> must not be exceeded.
- The line cross section must not exceed 2.5 mm<sup>2</sup>.
- If the device does not function after commissioning, it must be returned to the manufacturer unopened. Opening the device will void the warranty.



- A1: Power supply
- A2: Power supply
- S11: DC 24V control voltage
- S10: Control line
- S21: Start control line
- S13: Control line
- S14: Control line
- S12: Control line
- 13-14: Safety contact 1
- 23-24: Safety contact 2
- 33-34: Safety contact 3
- 41-42: Auxiliary contact

Fig. 3 Connections


B01  
B101  
E61-137-00

## User Information


### Applications

Depending on the application or the result of the risk assessment according to EN ISO 13849-1, the device must be wired as shown in Fig. 1 to Fig. 11.


### Emergency Stop Circuit

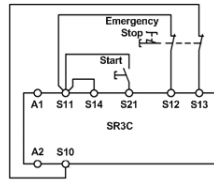


**Fig. 1:**  
Two-channel emergency stop circuit with short circuit and earth fault monitoring.  
(category 4, up to PL e)

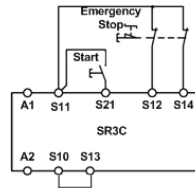


**Fig. 2:**  
Two-channel emergency stop circuit with earth fault monitoring.  
(category 3, up to PL d)

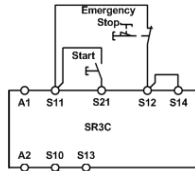

**Fig. 3:**  
Single-channel emergency stop circuit with earth fault monitoring.  
(category 1, up to PL c)

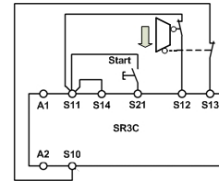

**Fig. 4:**  
Two-channel sliding guard monitoring with short circuit and earth fault monitoring.  
(category 4, up to PL e)

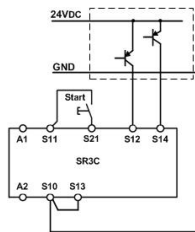


**Fig. 5:**  
Two-channel emergency stop with pnp-outputs/OSSD-outputs with short circuit monitoring.  
(category 4, up to PL e)


### Warning only for the 24V version:

In order to activate earth fault monitoring, the PE must be connected only to the power supply unit in accordance with EN60204-1.

### Starting Behavior

 


**Fig. 6:**  
Monitored manual start.  
It is monitored that the start button was opened before the emergency stop button closes.  
(Prerequisite: operating voltage must not be interrupted.)

 


**Fig. 7:**  
Automatic start.  
Max. perm. delay during closing of the safety switches on S12 and S13:  
S12 before S13: 300 ms  
S13 before S12: any

**Warning:**  
Safety contacts switch immediately when the power supply is connected.

### Feedback Loop

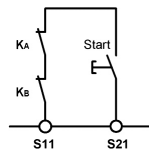


**Fig. 8:**  
Feedback loop for monitored manual start:  
The feedback loop monitors contactors or the expansion modules.

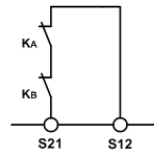


**Fig. 9:**  
Feedback loop for automatic start:  
The feedback loop monitors contactors or the expansion modules.

### Power supply and Safety contacts

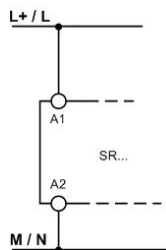

**Fig. 10:**  
Power supply A1 and A2.  
(Power supply according to techn. Data)

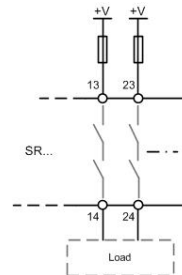

**Fig. 11:**  
Connecting load to safety contacts.  
(Figure shows example. Voltage „+V“ according to techn. Data)

### Commissioning Procedure

**Note:** The items listed under "Electrical connection" must be observed during commissioning.

#### 1. Wiring emergency stop circuit:

Wire the emergency stop circuit according to the required Performance Level determined (see Fig. 1 to Fig. 5).

#### 2. Wiring start circuit:

Wire the start circuit according to Fig. 6 or Fig. 7 to set the starting behavior.

#### Warning:

If "Automatic start" is set, bear in mind that the safety contacts will switch immediately after the power supply is connected. If "Monitored manual start" is set, the start button must be opened after wiring.

#### 3. Wiring feedback loop:

If your application provides for external contactors or expansion modules, connect them to the device according to Fig. 8 or Fig. 9.

#### 4. Wiring power supply:

Connect the power supply to terminals A1 and A2 (Fig. 10).

**Warning:** Wiring only in de-energized state.

#### 5. Starting the device:

Switch on the operating voltage.

#### Warning:

If the "Automatic start" starting behavior is set, the safety contacts will close immediately.

If the "Monitored manual start" starting behavior is set, close the start button to close the safety contacts.

LEDs **K1** and **K2** are lit.

#### 6. Triggering safety function:

Open the emergency stop circuit by actuating the connected safety switch. The safety contacts open immediately.

#### 7. Reactivation:

Close the emergency stop circuit. If "Automatic start" is selected, the safety contacts will close immediately.

If the "Monitored manual start" starting behavior is set, close the start button to close the safety contacts.



B01  
B101

E61-137-00

## User Information

### Maintenance

The device must be checked once per month for proper function and for signs of tampering and bypassing of the safety function.

The device is otherwise maintenance free, provided that it was installed properly.

### What to do in Case of a Fault?

#### Device does not switch on:

- Check the wiring by comparing it to the wiring diagrams.
- Check the safety switch used for correct function and adjustment.
- Check whether the emergency stop circuit is closed.
- Check whether the start button (with manual start) is closed.
- Check the operating voltage at A1 and A2.
- Is the feedback loop closed?

#### Device cannot be switched on again after an emergency stop:

- Check whether the emergency stop circuit was closed again.
- Was the start button opened before closing of the emergency stop circuit (with manual start)?
- Is the feedback loop closed?

If the fault still exists, perform the steps listed under "Commissioning Procedure".

If these steps do not remedy the fault either, return the device to the manufacturer for examination.

**Opening the device is impermissible and will void the warranty.**

### Safety Characteristics According to EN ISO 13849-1

The device is certified according to EN ISO 13849-1 up to a Performance Level of PL e.

**Note:** Additional data can be requested from the manufacturer for applications that deviate from these conditions.

Safety characteristics according to EN ISO 13849-1 for all variants of SR3C			
Load (DC13; 24V)	<= 0,1A	<= 1A	<= 2A
T10d [years]	20	20	20
Category	4	4	4
PL	e	e	e
PFHd [1/h]	1,2E-08	1,2E-08	1,2E-08
nop [cycle / year]	<= 500.000	<= 350.000	<= 100.000

### Techn. Data


Corresponds to the standards	EN 60204-1; EN ISO 13849-1 ; EN 62061
Operating voltage	AC/DC 24V
Rated supply frequency	50-60 Hz
Permissible deviation	+ / - 10%
Power consumption	<b>DC 24V</b> approx. 2.3W <b>AC 24V</b> approx. 4.5VA
Control voltage at S11	DC 24V
Control current S11...S14	approx. 60mA
Safety contacts	3 NO contacts
Auxiliary contacts	1 NC contact
Max. switching voltage	AC 250V
<b>Version 472172</b>	AC: 250V, 2000VA, 8A for ohmic load, 250V, 3A for AC-15
Safety contact breaking capacity (13-14, 23-24, 33-34)	DC: 24V, 48W, 2A for DC-13 Max. total current 15A (13-14, 23-24, 33-34)
<b>Version 472172</b>	AC: 250V, 500VA, 2A for AC-12
Auxiliary contact breaking capacity (41-42)	DC: 50V, 30W, 1.25A for ohmic load
<b>Version 472173 High DC breaking capacity</b>	AC: 250V, 2000VA, 8A for ohmic load 250V, 3A for AC-15
Safety contact breaking capacity (13-14, 23-24, 33-34)	<b>DC: 50V, 400W, 8A for ohmic load 24V, 3A, for DC-13</b> Max. total current through all 3 contacts: 15A (13-14, 23-24, 33-34)
<b>Version 472173 High DC breaking capacity</b>	AC: 250V, 500VA, 2A for AC-12
Auxiliary contact breaking capacity (41-42)	<b>DC: 50V, 100W, 2A for ohmic load</b>
Minimum contact load	24V, 20mA
Min. Contact fuses	6A slow-blow or 8A quick-action or 10A gG
Max. line cross section	0.14 - 2.5mm <sup>2</sup>
Max. length of control line	1000m with 0.75mm <sup>2</sup>
Contact material	AgNi
Contact service life	mech. approx. 1 x 10 <sup>7</sup> , electr. 1 x 10 <sup>5</sup> operating cycles
Test voltage	2.5kV (control voltage/contacts)
Rated impulse withstand voltage, leakage path/air gap	4kV (DIN VDE 0110-1)
Rated insulation voltage	250V
Degree of protection	IP20
Temperature range	-15°C to +40°C
Degree of contamination	2 (DIN VDE 0110-1)
Overvoltage category	3 (DIN VDE 0110-1)
Weight	approx. 230g
Mounting	DIN rail according to EN 60715TH35

B01  
B101

E61-137-00

## User Information

Dimension Drawing

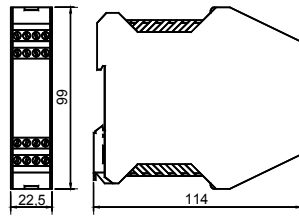

### Variants

Order no. 472172	SR3C, AC/DC 24V, fixed screw terminals
Order no. 472173	SR3C, AC/DC 24V ( <i>high DC breaking capacity</i> ), fixed screw terminals
Order no. 473172	SR3C, AC/DC 24V, plug-in terminals
Order no. 473173	SR3C, AC/DC 24V ( <i>high DC breaking capacity</i> ), plug-in terminals
Order no. 472592	EKLS4, set of plug-in screw terminals
Order no. 472593	EKLZ4, set of plug-in tensile spring terminals

## Konformitätserklärung EC Declaration of Conformity



**Hersteller:** H. ZANDER GmbH & Co. KG  
**Producer:** Am Gut Wolf 15 • D-52070 Aachen

**Produktgruppe:** Sicherheits-Not-Aus-Schaltgeräte  
**Product Group:** Safety emergency stop switching devices

**Die Produkte stimmen mit den Vorschriften folgender Europäischer Richtlinien überein:**  
The products conform with the essential protection requirements of the following European directives:

**2006/42/EG** : Maschinenrichtlinie  
2006/42/EG : Machinery directive

**2004/108/EG** : EMV Richtlinie  
2004/108/EG : EMC directive

**2006/95/EG** : Niederspannungsrichtlinie  
2006/95/EG : Low voltage switchgear directive

**Die Übereinstimmung der bezeichneten Produkte mit den Vorschriften der o.a. Richtlinie wird, falls anwendbar, nachgewiesen durch die vollständige Einhaltung folgender Normen:**

If applicable, the conformity of the designated products is proved by full compliance with the following standards:

EN 60439-1:2005-01	EN 60947-1:2008-04	EN 60947-5-1:2005-02
EN 60947-7-1:2003-07	EN 61000-6-2:2006-03	EN 61000-6-3: 2005-05
DIN EN 61326-3-1:2008-11	DIN EN ISO 13849-1:2008-12	DIN EN ISO 13849-2:2003
IEC 62061:2005-10		

Produkt Name Product Name	Anbringung der CE-Kennzeichnung Affixing of CE marking:	Zertifikats-Nr. No of Certificate
SRLC	2010	01/205/0594/09
SR2C	2010	01/205/0594/09
SR3C	2010	01/205/0594/09

Produkt Name Product Name	Anbringung der CE-Kennzeichnung Affixing of CE marking:	Zertifikats-Nr. No of Certificate

Benannte Stelle: Nr. NB 0035  
TÜV Rheinland Industrie Service GmbH  
10882 Berlin  
Zertifizierungsstelle für Maschinen

Dokumentationsbeauftragter: Christiane Nittschalk  
(Documentation manager)

Aachen, den 15.12.2009

Dipl.-Ing. Walter Zander  
Geschäftsleitung  
(General Manager)

Dipl.-Ing. Alfons Austerhoff  
Leiter CE-Konformitätsbewertung  
(Manager for EC declaration of conformity)

B01  
B101  
E61-137-00